

Marshall

MONITOR III A.N.C. – OVER-EAR HEADPHONES

FULL ONLINE MANUAL

CONTENTS

INDEX

Getting started	005
Using the control knob	005
Charging the headphones	005
M-button	005
Spotify Tap	006
Using the hard case	006
Connecting a 3.5 mm sound device	007
Cleaning your Monitor III A.N.C.	007
Battery care guide	008
Pairing a new device	008
Resetting the headphones	009
Troubleshooting	010

DEVICE LAYOUT

ENGLISH



DEVICE LAYOUT

ENGLISH

① CONTROL KNOB

Use the control knob, located on the right ear cup to control your music, phone calls and more.

② LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It pulses blue while in Bluetooth® pairing mode and white while searching for a device. The LED is steady white when connected.

③ USB-C PORT

Charge the headphones by plugging in a USB power source via the USB-C to USB-C cable.

The USB-C port can also be used as an audio input. Turn on the headphones and connect them via the included audio cable to a sound device's 3.5 mm output jack.

④ ANC BUTTON

Push the ANC button to toggle between noise cancelling and transparency. Noise control can be adjusted in the Marshall Bluetooth app.

⑤ CUSTOMISABLE M-BUTTON

Push the M-button to get the music started with Spotify Tap. The M-button can be customised in the Marshall Bluetooth app.

INSTRUCTIONS

ENGLISH

GETTING STARTED

- I. Push and hold the control knob until the LED turns to a slow blue pulse.
- II. Select **MONITOR III A.N.C.** from your sound device's Bluetooth list.
- III. Download the Marshall Bluetooth app and follow the in-app instructions to complete the setup.

USING THE CONTROL KNOB

Use the control knob, located on the right ear cup to control your music, phone calls and more.

- Power on/off – push and hold for 1 second
- Play/pause – push once
- Skip backward/forward – push left/right
- Turn up/down the volume – push up/down
- Receive/end a call – push once
- Reject a call – push twice
- Bluetooth pairing, headphones are off – push and hold for 2 seconds
- Bluetooth pairing, headphones are on – push twice

CHARGING THE HEADPHONES

Plug the headphones into a USB power source to charge them. The headphones are fully charged when the LED indicator is steady green.

M-BUTTON

Push the M-button to access a custom action, that can be selected in the Marshall Bluetooth app. By default, the M-button action is Spotify Tap.

INSTRUCTIONS

ENGLISH

SPOTIFY TAP

Get straight to the music with Spotify Tap. Wherever your day takes you, Spotify Tap is the easiest, most personal way to take your music with you, and it's ready in seconds.

- I. Push the M-button to play a recommendation based on your listening taste.
- II. Push the M-button again for the next recommendation made just for you.

To use Spotify Tap, make sure your Spotify app is up to date.




USING THE HARD CASE

The included hard case protects your headphones when you are not using them.

- I. Turn the left ear cap counter-clockwise while turning the right ear cap clockwise.
- II. Fold the headphones until the soft ear cushions meet.
- III. Place the headphones in the hard case.

Note: Using the hard case with the headphones folded incorrectly may leave permanent marks on the ear cushions.

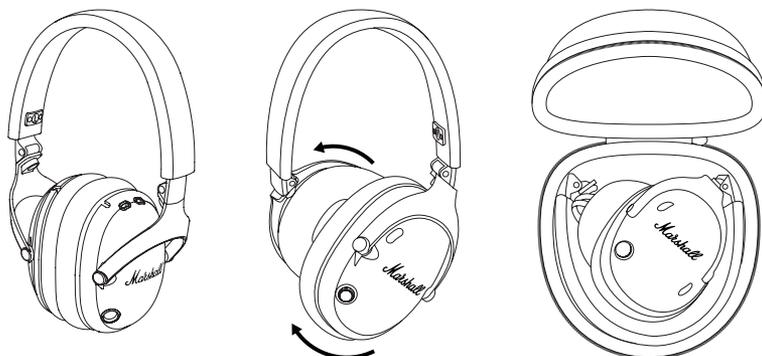

INSTRUCTIONS

ENGLISH

CONNECTING A 3.5 MM SOUND DEVICE

If your sound device does not support Bluetooth, you can still connect to it via the included USB-C audio cable.

Note: Make sure that the sound device's volume is set to low before plugging in the headphones.

- I. Make sure that the headphones are turned on and any connected Bluetooth device is paused.
- II. Connect the included audio lead to the USB-C port on the headphones.
- III. Connect the other end to the 3.5 mm stereo output on the sound device.

CLEANING YOUR MONITOR III A.N.C.

Headphones come in close contact with your skin frequently and sometimes for long periods of time. This may over time cause build-up of dirt and grease that can affect performance and cause skin irritation. Clean your headphones regularly to keep them fresh and make them last longer.

Unplug any cables before cleaning the headphones. Make sure everything is completely dry before charging the batteries, plugging in any cables, or using the headphones.

Remove the ear cushions by turning them anticlockwise and clean them separately. To put back the ear cushions, place them on the earcups, tilted at a slight angle, and turn them clockwise to lock them in place.

Gently clean the headphones, headband, ear cushions and cables with a lint-free cloth, slightly damp with either:

- water,
- 70% isopropyl alcohol, or
- 75% ethyl alcohol

Avoid getting moisture in any openings or in the speaker mesh. Carefully clean those areas with a dry and soft brush, or a cotton swab.

- Do not use any sharp objects.
- Do not use compressed air.
- Do not use products containing bleach or hydrogen peroxide.
- Do not submerge the headphones in any cleaning agents.
- Do not rinse the headphones under running water.

INSTRUCTIONS

ENGLISH

BATTERY CARE GUIDE

Your headphones come equipped with high-performance lithium-ion batteries with a life span that is affected by charging and usage. Follow the guidelines below to keep your batteries in great condition for as long possible.

- Avoid using fast chargers if possible. Fast charging causes stress on the battery and will degrade it.
- Avoid letting the battery drain completely or charging it when it's already full. Try to keep the charge between 30% and 80%.
- If the headphones are stored for a long time, it's recommended to charge them to about half-charge and then do a factory reset. Store the headphones in a cool, dark, and dry place.
- Avoid using or charging the headphones in hot and unventilated places, 40°C/104°F and above.
- Avoid charging the battery at low temperatures, below 10°C/50°F and using the headphones below 0°C/32°F.
- Avoid strong mechanical shocks such as dropping the headphones on hard surfaces as it might harm the batteries.

Download the Marshall Bluetooth app and select the battery preservation level that best suits you and your headphones.

PAIRING A NEW DEVICE

Monitor III A.N.C. can be connected to two devices at a time and remembers up to 8 previously paired devices. When in range, they will try to reconnect with the last connected device.

- I. Start with the headphones turned on.
- II. Double press the control knob and the LED turns to a slow blue pulse.
- III. Select **MONITOR III A.N.C.** from your sound device's Bluetooth list.

INSTRUCTIONS

ENGLISH

RESETTING THE HEADPHONES

If your headphones become erratic or unresponsive, follow the instructions below.

- I. Push and hold the control jog for 10 seconds to restart the headphones. If the problem persists, perform a factory reset.

Note: This will delete all user settings and the headphones will need to be paired again.

- I. Remove **MONITOR III A.N.C.**, and **MONITOR III A.N.C. [LE]** if present, from your sound device's Bluetooth list.
- II. Make sure your headphones are turned on.
- III. Push and hold both the M-button and the ANC button for 5 seconds and release when the LED indicator turns purple.
- IV. The headphones have returned to their factory settings and are ready to be paired, see the section Getting started.

MARSHALL BLUETOOTH APP

Download the Marshall Bluetooth app to get the most out of your headphones and keep them up to date with the latest software.



TROUBLESHOOTING

ENGLISH

PROBLEM	CAUSE	ACTION
The headphones do not turn on	The battery has no charge.	Plug the headphones into a USB power source to charge them.
Cannot connect or pair with a Bluetooth device	Bluetooth is not enabled on your device (smartphone, tablet, computer).	Activate Bluetooth on your sound device.
	The headphones are not in pairing mode.	Follow the instruction in Pairing a new device.
Erratic behaviour	The headphones are not using the latest firmware version.	Download the Marshall Bluetooth app and connect to the headphones. Follow the in-app instructions to ensure that Monitor III A.N.C. has the latest firmware version.
	There is a software error.	Perform a factory reset, see the section Resetting the headphones. The headphones need to be set up again.

TROUBLESHOOTING**ENGLISH**

PROBLEM	CAUSE	ACTION
Spotify does not start	The Spotify app is not installed on your sound device.	Install the latest version of the Spotify app on your sound device.
	The M-button is configured with a different action.	Download the Marshall Bluetooth app and connect to the headphones to customise the M-button behaviour.

All intellectual property in the product and packaging (including the MARSHALL trade mark, copyright, designs, and patents) are owned by Marshall Group AB and may not be used without permission.

All rights reserved. The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Marshall Group AB is under license. Google Play is a trademark of Google LLC. App Store is a service mark of Apple Inc., registered in the U.S. and other countries Marshall Group AB, Centralplan 15, 111 20 Stockholm, Sweden. Produced in China. R1.3

Marshall

MONITOR III A.N.C. – OVER-EAR HEADPHONES

ПОЛНОЕ ОНЛАЙН-РУКОВОДСТВО

СОДЕРЖАНИЕ

УКАЗАТЕЛЬ

Начало работы	005
Использование кнопки управления	005
Зарядка наушников	005
M-кнопка	005
Spotify Tap	006
Использование твердого чехла	006
Подключение звукового устройства через разъем 3,5 мм	007
Очистка Monitor III A.N.C.	007
Руководство по уходу за аккумулятором	008
Сопряжение с новым устройством	008
Сброс настроек наушников	009
Устранение неполадок	010

СХЕМА УСТРОЙСТВА

РУССКИЙ



1 КНОПКА УПРАВЛЕНИЯ

Кнопка управления, расположенная на правом наушнике, служит для управления музыкой, телефонными звонками и другими функциями.

2 СВЕТОДИОДНЫЙ ИНДИКАТОР

Светодиодный индикатор показывает уровень заряда аккумулятора: от красного до зеленого с промежуточным оранжевым (0–100%). Он мигает синим в режиме сопряжения по Bluetooth® и белым при поиске устройства. Когда подключение установлено, индикатор постоянно горит белым.

3 РАЗЪЕМ USB-C

Для зарядки наушников подключите их к источнику питания USB с помощью кабеля со штекерами USB-C на обоих концах.

Разъем USB-C также можно использовать в качестве аудиовхода. Включите наушники и подключите их к выходному разъему 3,5 мм на аудиоустройстве с помощью аудиокабеля, входящего в комплект.

4 КНОПКА ANC

Кнопка ANC служит для переключения между режимами шумоподавления и прозрачности. Контроль шума можно настроить в приложении Marshall Bluetooth.

5 ИНДИВИДУАЛЬНО НАСТРАИВАЕМАЯ М-КНОПКА

Нажмите М-кнопку, чтобы включить музыку через Spotify Tap. М-кнопку можно настроить в приложении Marshall Bluetooth.

ИНСТРУКЦИИ

РУССКИЙ

НАЧАЛО РАБОТЫ

- I. Нажмите кнопку управления и держите ее нажатой, пока светодиод не начнет медленно мигать синим.
- II. В списке Bluetooth на устройстве воспроизведения выберите **MONITOR III A.N.C.**
- III. Скачайте приложение Marshall Bluetooth и следуйте инструкциям в приложении, чтобы выполнить настройку.

ИСПОЛЬЗОВАНИЕ КНОПКИ УПРАВЛЕНИЯ

Кнопка управления, расположенная на правом наушнике, служит для управления музыкой, телефонными звонками и другими функциями.

- Включение/выключение: нажмите и удерживайте 1 секунду
- Воспроизведение/пауза: нажмите один раз
- Переход назад/вперед: нажмите влево/вправо
- Увеличение/уменьшение громкости: нажмите вверх/вниз
- Ответ на вызов / завершение вызова: нажмите один раз
- Отклонение вызова: нажмите два раза
- Сопряжение устройств по Bluetooth (наушники выключены): нажмите и удерживайте 2 секунды
- Сопряжение устройств по Bluetooth (наушники включены): нажмите два раза

ЗАРЯДКА НАУШНИКОВ

Подключите наушники к источнику питания с помощью USB-кабеля и зарядите их. Если светодиодный индикатор постоянно горит зеленым, значит, наушники полностью зарядились.

М-КНОПКА

Нажмите М-кнопку для выполнения заданного действия (его можно выбрать в приложении Marshall Bluetooth). Действием по умолчанию для М-кнопки является активация Spotify Tap.

ИНСТРУКЦИИ

РУССКИЙ

SPOTIFY TAP

С функцией Spotify Tap любимая музыка всегда под рукой. Куда бы ни забросили вас дела, Spotify Tap — это самый быстрый, простой и удобный способ взять свою музыку с собой.

- I. Нажмите М-кнопку, чтобы воспроизвести рекомендованный трек с учетом ваших предпочтений.
- II. Нажмите М-кнопку еще раз, чтобы воспроизвести следующий рекомендованный трек.

Для использования функции Spotify Tap требуется последняя версия приложения Spotify.




ИСПОЛЬЗОВАНИЕ ТВЕРДОГО ЧЕХЛА

Твердый чехол, входящий в комплект, защищает наушники, когда они не используются.

- I. Одновременно поверните левый наушник против часовой стрелки, а правый — по часовой стрелке.
- II. Сложите наушники, так чтобы мягкие амбушюры коснулись друг друга.
- III. Поместите наушники в твердый чехол.

Примечание. Использование твердого чехла с неправильно сложенными наушниками может привести к появлению царапин на амбушюрах.

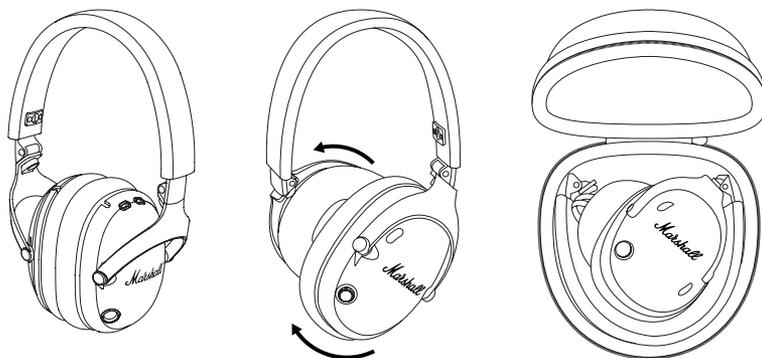

ИНСТРУКЦИИ

РУССКИЙ

ПОДКЛЮЧЕНИЕ ЗВУКОВОГО УСТРОЙСТВА ЧЕРЕЗ РАЗЪЕМ 3,5 ММ

Если ваше звуковое устройство не поддерживает Bluetooth, к нему можно подключиться с помощью аудиокабеля USB-C, входящего в комплект.

Примечание. Перед подключением наушников необходимо установить минимальный уровень громкости на звуковом устройстве.

- I. Наушники должны быть включены, а воспроизведение на подключенном устройстве Bluetooth поставлено на паузу.
- II. Подключите аудиокабель, входящий в комплект, в разъему USB-C на наушниках.
- III. Другой конец кабеля подключите к стереовыходу 3,5 мм на звуковом устройстве.

ОЧИСТКА MONITOR III A.N.C.

Наушники часто и довольно продолжительное время касаются вашей кожи. С течением времени на них скапливаются грязь и жир, что может отрицательно сказаться на рабочих характеристиках и вызвать раздражение кожи. Регулярно чистите наушники, чтобы поддерживать их в опрятном состоянии и продлить срок их службы.

Перед чисткой наушников отсоедините все кабели. Перед использованием или зарядкой наушников, а также перед подключением любых проводов убедитесь, что все поверхности полностью высохли.

Поверните амбушюры на наушниках против часовой стрелки и снимите их, чтобы очистить отдельно. После очистки наденьте амбушюры обратно, наклонив их под небольшим углом, и поверните по часовой стрелке, чтобы зафиксировать.

Аккуратно очистите наушники, дугу, амбушюры и провода безворсовой тканью, слегка смоченной:

- водой;
- 70%-м изопропиловым спиртом; или
- 75%-м этиловым спиртом.

Избегайте попадания влаги в отверстия и сетку динамика. Аккуратно очищайте эти области сухой мягкой кисточкой или ватной палочкой.

- Не используйте острые предметы.
- Не применяйте сжатый воздух.
- Не используйте вещества, содержащие отбеливатель или перекись водорода.
- Не погружайте наушники в чистящие вещества.
- Не промывайте наушники струей воды.

ИНСТРУКЦИИ

РУССКИЙ

РУКОВОДСТВО ПО УХОДУ ЗА АККУМУЛЯТОРОМ

Ваши наушники оснащены высокопроизводительными литий-ионными аккумуляторами, срок службы которых зависит от режима зарядки и использования. Следуйте приведенным ниже инструкциям, чтобы как можно дольше поддерживать аккумуляторы в отличном состоянии.

- По возможности избегайте быстрой зарядки, так как она создает излишнюю нагрузку на аккумулятор, из-за чего он быстрее выходит из строя.
- Не допускайте полной разрядки аккумулятора или зарядки уже полностью заряженного аккумулятора. Поддерживайте заряд на уровне от 30% до 80%.
- Если наушники не будут использоваться в течение длительного времени, рекомендуется зарядить их наполовину, а затем выполнить сброс до заводских настроек. Храните наушники в прохладном, темном и сухом месте.
- Избегайте использования или зарядки наушников в жарких непроветриваемых местах с температурой 40°C (104°F) и выше.
- Избегайте зарядки аккумулятора при температурах ниже 10°C (50°F) и использования наушников при температурах ниже 0°C (32°F).
- Избегайте сильного механического воздействия, например падения наушников на твердые поверхности, так как это может повредить аккумуляторы.

Скачайте приложение Marshall Bluetooth и выберите уровень экономии заряда аккумулятора, который больше всего подходит для вашего режима использования наушников.

СОПРЯЖЕНИЕ С НОВЫМ УСТРОЙСТВОМ

Monitor III A.N.C. можно подключить к двум устройствам одновременно; запоминаются не более 8 ранее сопряженных устройств. Находясь в радиусе действия, наушники попытаются подключиться к последнему подключенному устройству.

- I. Включите наушники.
- II. Дважды нажмите кнопку управления. Светодиодный индикатор начнет медленно мигать синим.
- III. В списке Bluetooth на устройстве воспроизведения выберите **MONITOR III A.N.C.**

ИНСТРУКЦИИ

РУССКИЙ

СБРОС НАСТРОЕК НАУШНИКОВ

Если наушники начинают работать с ошибками или перестают отвечать на запросы, следуйте приведенным ниже инструкциям.

- I. Нажмите и удерживайте кнопку управления в течение 10 секунд, чтобы перезапустить наушники.

Если проблема не устранена, выполните сброс к заводским настройкам.

Примечание. При этом будут удалены все пользовательские настройки — сопряжение наушников нужно будет выполнить заново.

- I. Удалите **MONITOR III A.N.C.** и **MONITOR III A.N.C. [LE]** (при их наличии) в списке Bluetooth своего звукового устройства.
- II. Убедитесь, что наушники включены.
- III. Нажмите и удерживайте одновременно M-кнопку и кнопку ANC в течение 5 секунд. Отпустите их, когда индикатор загорится фиолетовым.
- IV. Сброс к заводским настройкам выполнен, и наушники готовы к сопряжению, см. раздел «Начало работы».

ПРИЛОЖЕНИЕ MARSHALL BLUETOOTH

Скачайте приложение Marshall Bluetooth: оно поможет использовать все возможности наушников и будет регулярно обновлять их программное обеспечение.



УСТРАНЕНИЕ НЕПОЛАДОК**РУССКИЙ**

НЕПОЛАДКА	ПРИЧИНА	СПОСОБ УСТРАНЕНИЯ
Наушники не включаются	Батарея не заряжена.	Подключите наушники к источнику питания с помощью USB-кабеля и зарядите их.
Не удается подключиться к устройству Bluetooth или выполнить сопряжение с ним	Функция Bluetooth не включена на устройстве (смартфоне, планшете, компьютере).	Включите Bluetooth на звуковом устройстве.
	Наушники не переведены в режим сопряжения.	Следуйте инструкциям в разделе «Сопряжение с новым устройством».

УСТРАНЕНИЕ НЕПОЛАДОК

РУССКИЙ

НЕПОЛАДКА	ПРИЧИНА	СПОСОБ УСТРАНЕНИЯ
Ошибки в работе	В наушники не загружена последняя версия прошивки.	Скачайте приложение Marshall Bluetooth и подключитесь к наушникам. Следуя инструкциям в приложении, загрузите в Monitor III A.N.C. последнюю версию прошивки.
	Ошибка программного обеспечения.	Выполните сброс к заводским настройкам, см. раздел «Сброс настроек наушников». После этого потребуется настроить наушники заново.
Spotify не запускается	На звуковом устройстве не установлено приложение Spotify.	Установите последнюю версию приложения Spotify на звуковом устройстве.
	Для М-кнопки задано другое действие.	Скачайте приложение Marshall Bluetooth и подключитесь к наушникам, чтобы выбрать действие для М-кнопки.

All intellectual property in the product and packaging (including the MARSHALL trade mark, copyright, designs, and patents) are owned by Marshall Group AB and may not be used without permission.

All rights reserved. The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Marshall Group AB is under license. Google Play is a trademark of Google LLC. App Store is a service mark of Apple Inc., registered in the U.S. and other countries Marshall Group AB, Centralplan 15, 111 20 Stockholm, Sweden. Produced in China. R1.3